



# OLPC XO-1.5 Screen Replacement

This guide will demonstrate how to install the screen of the OLPC XO-1.5 laptop.

Written By: Andrew Ferrell



## INTRODUCTION

This guide will show you how to access the screen on your OLPC XO 1.5.

---



### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery



- Place the laptop upside down with the handle away from you.

## Step 2

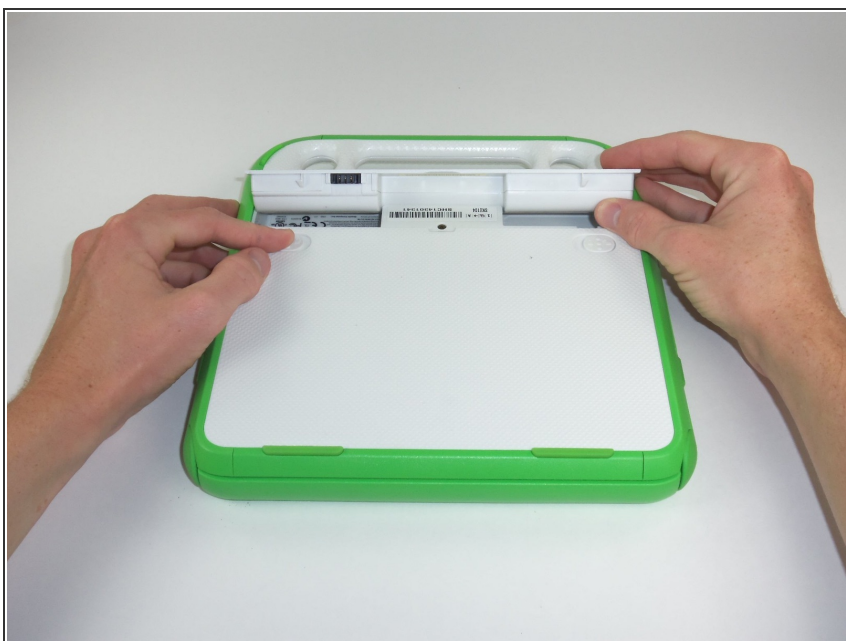

- Slide the tabs out, towards the green edges, to show the open lock symbol.
- ⓘ The right tab will stay in place, but the left tab must be held in position while you remove the battery.

## Step 3



- Lift the middle of the battery to remove it.

## Step 4 — Screen



- Turn the laptop so it is resting on its bottom.
- Open the laptop by rotating the green wings on the side up, then lifting the top half of the laptop.
- Rotate the top half of the laptop about 90 degrees.



## Step 5



- Turn the laptop upside down, so you can see the screws on the bottom of the top half.
- Remove the two 4mm screws with a Phillips #1 screwdriver.
- Rotate the top half 180 degrees.
- Remove the two 4mm screws with a Phillips #1 screwdriver.

## Step 6



- Rotate the top of the laptop 90 degrees, so that it is facing you again.
- Slide the green pieces off the device. They should come off easily.

## Step 7



- Pull down on the white screen cover. It does not require much force.
- Remove the screen cover.
- ⓘ The game pad on the left sometimes falls during this step.

## Step 8




- Unscrew the four 7.62mm Phillips #1 screws on either side of the screen.
- ⚠ The screen is still connected by ribbon cables. You can damage the cables if you remove the screen before disconnecting the cables.
- Move the screen down a little to expose the ribbon cables.

## Step 9



- Flip up the tab right under the middle top of the screen.
- Pull the black ribbon cable out of the socket.

## Step 10

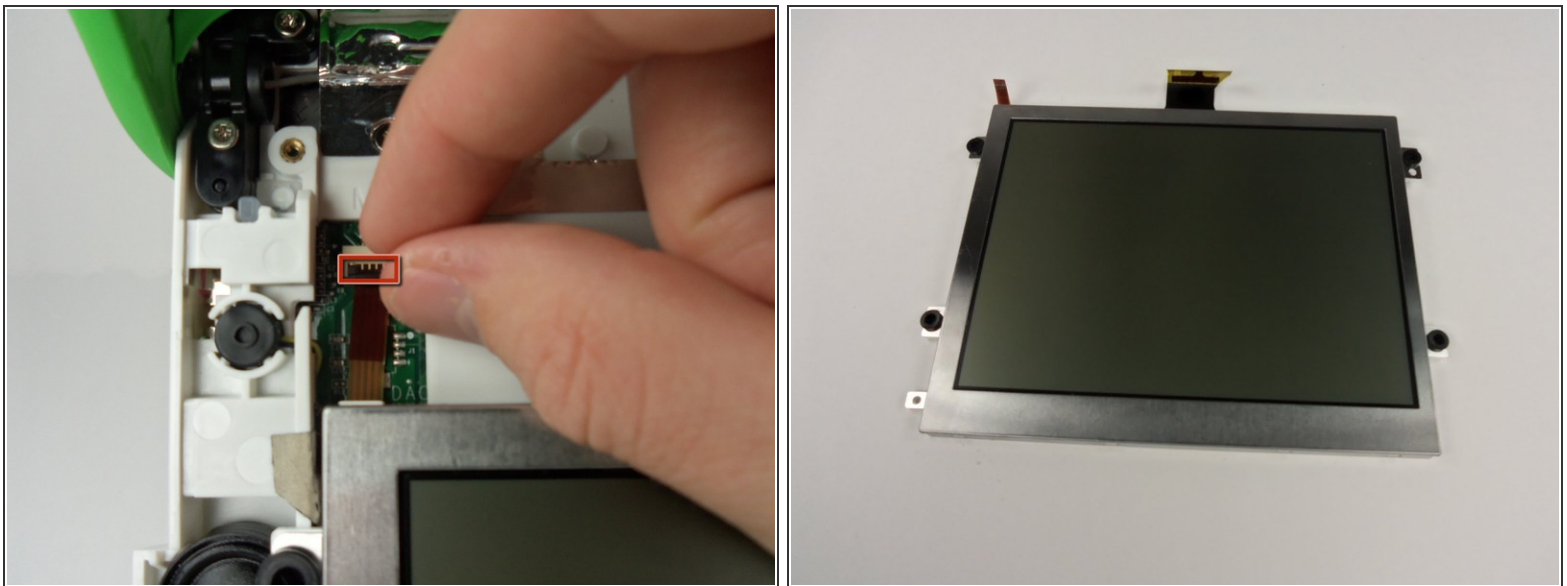

- Flip up the smaller tab under the left side of the screen.
- Remove the small cable to separate the screen from the rest of the laptop.
- Gently remove the screen.

To reassemble your device, follow these instructions in reverse order.

